

## 1.5 Remote Dial-in User profile Setup

On Vigor's web configuration page, click VPN and Remote Access>> Remote Dial-in User

Select the IPSec Peer Identity profile for Digital Signature(X.509)

VPN and Remote Access >> Remote Dial-in User

---

**Index No. 1**

<p><b>User account and Authentication</b></p> <p><input checked="" type="checkbox"/> Enable this account</p> <p>Idle Timeout <input type="text" value="0"/> second(s)</p>	<p>Username <input type="text" value="draytek"/></p> <p>Password <input type="password"/></p>
<p><b>Allowed Dial-In Type</b></p> <p><input checked="" type="checkbox"/> ISDN</p> <p><input checked="" type="checkbox"/> PPTP</p> <p><input checked="" type="checkbox"/> IPSec Tunnel</p> <p><input checked="" type="checkbox"/> L2TP with IPSec Policy <input type="text" value="None"/></p> <p><input type="checkbox"/> Specify Remote Node</p> <p>Remote Client IP or Peer ISDN Number <input type="text"/></p> <p>or Peer ID <input type="text"/></p>	<p><b>IKE Authentication Method</b></p> <p><input checked="" type="checkbox"/> Pre-Shared Key</p> <p>IKE Pre-Shared Key <input type="text"/></p> <p><input checked="" type="checkbox"/> Digital Signature (X.509)</p> <p><input type="text" value="teleworker"/></p>
	<p><b>IPSec Security Method</b></p> <p><input checked="" type="checkbox"/> Medium (AH)</p> <p>High (ESP)</p> <p><input checked="" type="checkbox"/> DES <input checked="" type="checkbox"/> 3DES <input checked="" type="checkbox"/> AES</p> <p>Local ID <input type="text"/> (optional)</p>
	<p><b>Callback Function</b></p> <p><input type="checkbox"/> Check to enable Callback function</p>